

CHANGING, ADDING OR DELETING ACCESS CODES

For 1000 Series

1. Hold down Key [8] until you hear a long beep.
2. Enter the program code: 1-2-3-4-5-6 The first three lights will flash and sounder will pulse.
3. Press [B/A] (Bypass Key).
4. Enter the User number "1" through "6"
5. Enter a four digit code (digits 1-9 only)
6. To end the programming mode, press [B/A] Key.
7. To erase a code, follow steps 1-4, do not enter a four digit code, then 6.

NOTE: Do not start an access code with "1,1" because that is your ambush code.