

Local Alarm, Inc.

Key #	Keypad Functions
1	TEST BUTTON FOR SIREN Hold down until siren is heard.
2	IF ANY ZONE HAS BEEN BYPASSED , the bypass light will be lit. To see what zones have been bypassed, press down Key 2 and hold -- system will scroll through bypassed zones.
3	DISPLAY STATUS KEY If the display status light is not solid green and is blinking, this indicates that the system is not ready to arm. Press key 3 and hold -- this will display the zones that are open or in trouble.
4	INSTANT PROTECTION Used most often when going to bed and not expecting anyone the rest of the night. Hold down Key 4 until it beeps. This function deletes the delay on all exit/entry doors.
5	CHIME FUNCTION Normally programmed on exit/entry zones. When a particular door is opened, the keypad will chime - similar to doorbell. This function can be enabled or disabled simply by holding down Key 5 until it beeps.
9	Hold down Key 9 to SILENCE ANY SOUNDER INDICATION.
* #	PANIC BUTTONS - Audible or Silent Press keys * and # together and you will activate a panic alarm.
11	AMBUSH CODE Example: If someone ambushes you with a gun or knife and tells you to shut off the alarm, you simply press 11 and your access code and this will activate a silent alarm. The person will simply think you turned off the alarm.

OTHER FUNCTIONS:

Fire/Trouble Light

If light is flashing, this indicates fire circuit is in trouble. Sounder will pulse - to silence, hold down Key 9.

If light is steady, this condition indicates a fire alarm. Keypad sounder and siren will be going off.

To reset, punch access code twice and hold down Key 9 until sounder silences.

Bypass Function

If system is in trouble with one zone and you must leave, the bypass function can be used. Simply press Key 3 (Display Status) to find the particular zone in trouble, then press Key B/A and the Zone number you want to bypass. (Bypass light will come on indicating that the zone has been bypassed.) To arm system, punch in your access code. (The arm light will come on and stay on steady.) TO CLEAR BYPASS - punch in access code.

Arm/Alarm

If the red arm/alarm is flashing, the premises has been burglarized. (Leave premises, call police.) After returning, punch in access code and the numerical window will be flashing numbers. This indicates what protection has been violated. TO CLEAR press Key 9.

Flashing P

Indicates you have attempted to arm the system without having steady green status light. (This indicates an area is not secure.)

Status Light

Must be solid green before system can be armed. (Flashing indicates zone in trouble) - Press Key 3 (Display Status) to find what zone is in trouble.

First Three Lights On Keypad Slowly Flashing

Indicates A/C power loss. After 10 seconds, keypad sounder will be activated. To silence sounder, press Key 9 and hold until sounder beeps. System will operate on backup batteries for approximately 5 hours. When power is restored, repeat reset procedure.

Stay Mode

Press Key B/A twice. Then punch in access code. This function is to delete interior protection.

FOR SERVICE CALL: 576-9044

Central Station Information: 1-800-631-2299