

KEYPAD FUNCTIONS

GEM-P801

KEY

Status Light	Must be on before system can be armed .
On/Off	EASY ARM
Armed Light	Armed Light will light when system is armed, and will flash when system is in alarm.
Bypass Function	If system is in trouble with one zone and you must leave, the Bypass function can be used. Simply press Bypass Key and then corresponding zone number you want to bypass. The corresponding zone's number will flash slowly. You may then arm system as usual. When the system is disarmed, all bypassed zones will be reset.
Auto Bypass	When system is armed and NO Entry/Exit door is opened, interior protection will automatically be bypassed.
Instant	Press Instant to remove entry delay from the Entry/Exit door. The red Armed light will flash rapidly while in instant mode.
AC Light	This will be lit to indicate that AC Power is present.
Function, 1	TEST BUTTON FOR SIREN Press the Function Key and then the 1 Key until siren is heard.
Function, 5	CHIME FUNCTION Normally programmed on exit/entry zones. When a particular door is opened, the keypad will chime - similar to doorbell. This function can be enabled or disabled simply by pressing Function Key and then Key 5.
Function, 9P KEYPAD SOUND.	Press the Function Key and then Key 9 to TURN ON AND OFF ANY
9P & ρ	PANIC BUTTONS - Audible or Silent Press both Keys together and you will activate a panic alarm.
7A & ρ	FIRE- Press both Keys together to activate a fire alarm.

OTHER FUNCTIONS:

1,2,3,4

AMBUSH CODE

Example: If someone ambushes you with a gun or knife and tells you to shut off the alarm, you simply press 1,2,3,4 and this will activate a silent alarm. The person will simply think you turned off the alarm.



If light is **flashing**, this indicates **fire alarm**.

Sounder will pulse - to silence, enter access code followed by On/Off. That will silence alarm but Fire LED on keypad will remain lit. To reset fire zone press Reset.



If light is **steady**, this condition indicates a **System Trouble** is present. Keypad sounder will beep. To silence, press Function then 9P.

Alarm Memory

If the Red Armed light is flashing rapidly, an alarm has occurred. (Leave premises, call police.) After returning, punch in access code followed by the On/Off Key. The LED by the zone that was violated will be lit. TO CLEAR press Reset Key .

Zone Lights

Zone lights (1 through 8) will light if zone is open and will flash if the the zone has been violated.

Reset

Press **Reset** to reset Fire Zone, clear mis-entered codes, reset Alarm Memory, etc.

Emergency Keys (If enabled)

Press simultaneously to signal an emergency condition:

7F & * **Fire Emergency**

8A & * **EMS**

9P & * **Police Emergency (Panic)**

FOR SERVICE CALL: 576-9044