

Keypad Instructions

Arming the System

Check the keypad. You must have a **green status light** in order to arm. Enter your code and press the “**On/Off Button**”. The **green status light** should go off and the **red armed light** should go on.

If the **green status light** is off, “zones faulted” will display in the window followed by the number & description of each faulted zone. Secure the problem zones and the **green status light** should come on. Proceed as above.

If you cannot secure a zone, call Local Alarm for assistance. Until the problem is solved, you will have to bypass the faulted zone.

Bypassing a Zone

To bypass a zone, press the “**Bypass**” key and then the zone number. Remember: Bypassed zones are unprotected.

Bypassing Interior Zones

For free movement within the premises while the perimeter zones are armed, press the “**Interior**” key. This will bypass all interior zones.

Disarming the System

Upon entry, the keypad sounder will come on to remind you to disarm the panel. The **red armed light** should be on and the window should display the entry time remaining and a “Disarm System” message.

To **disarm**, put in your **code** and then press the “**On/Off**” button. If you enter a wrong code, the keypad will display “Invalid Entry, Try Again”. Re-enter your code immediately.

Alarm Indication

If the **red armed light** is flashing and “**ALARM**” is displayed, an alarm has occurred while you were away.

To silence an audible alarm: enter your **code** and press the “**On/Off**” button. To reset the display, press the reset button.

Instant Protection

When retiring for the evening, you will want to cancel the delay time on your entry/exit zones. Once this is done, if a door is opened while the system is armed, it will cause an instant alarm.

To cancel the delay, simply press the “**Instant**” button. The armed light will flicker rapidly to indicate *instant* protection.

- Ambush** If an intruder forces you to disarm the system, enter the **ambush code (99)** before entering your **disarm code**. The system will disarm as usual but will also send a silent alarm to the central station.
- Panic** To send a silent panic alarm signal to the central station, press **“P” and “p”**
- Auxiliary or Medical** To send a silent auxiliary or medical alert signal to the central station, press **“A” and “p”**.
- Fire** To initiate a fire alarm, press **“F” and “p”**
- If a fire is detected, **“Fire Alarm”** will be displayed and the keypad sounder will pulse. If there is no evidence of a fire, enter your **code** and press **“On/Off”** to turn off the alarm. Press the **“Reset”** button to silence the keypad sounder. After the alarm condition is corrected, pressing **“Reset”** again will reset the keypad within about 10 seconds.
- Fire Trouble** If a problem in the fire-circuit is detected, **“Fire Trouble”** will display and the sounder will pulse to signal a malfunction. Press the **“Reset”** button to silence the sounder. *Call for service.*
- Multi-Area Systems** In a system that has been split into multiple areas, one or more areas may be armed while others remain disarmed. To arm any area from any keypad, press the numerical key representing the area number. Press the **“*”** button, then **“On/Off”**. In effect you will now be in that area. Enter your code (which must be valid for that area), then the **“On/Off”** button to arm.

FOR SERVICE CALL: 576-9044

Central Station Information: 1-800-932-3822